
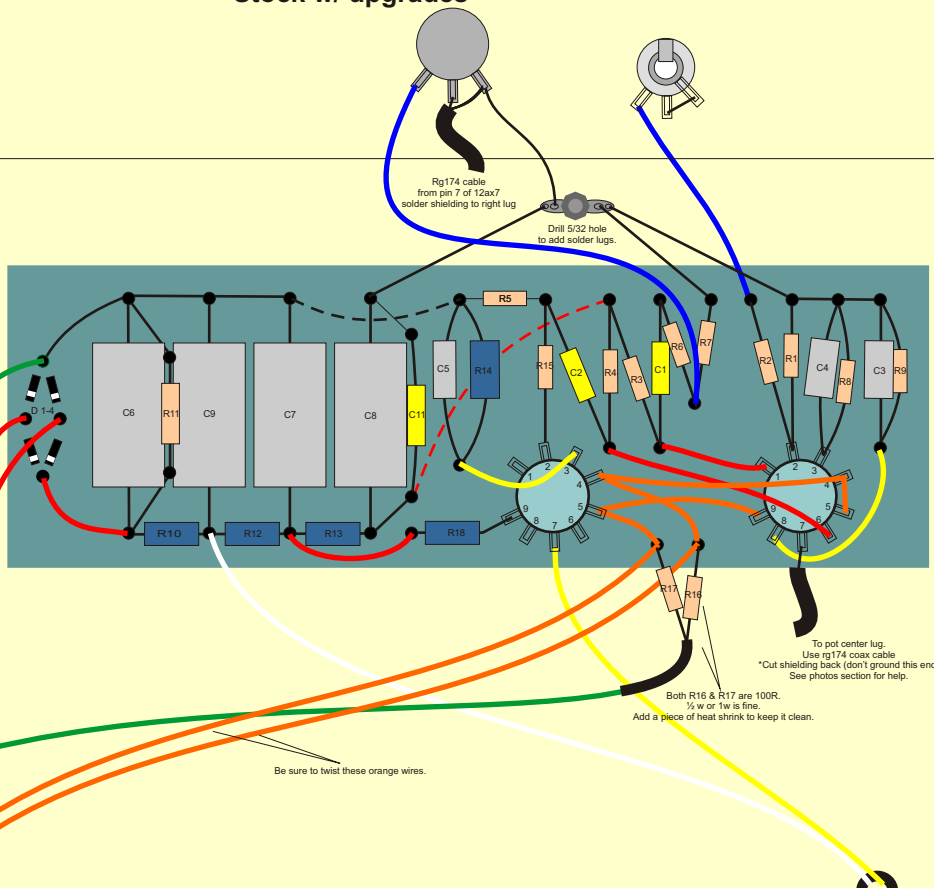
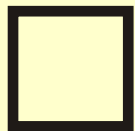


VALVE JUNIOR LAYOUT

Stock w/ upgrades

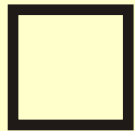


Both of these green/yellow wires are grounds. They were disconnected from the stock board and re-used here on the replacement board.

To pot center lug. Use rg174 coax cable. *Cut shielding back (don't ground this end) See photos section for help.

Both R16 & R17 are 100R. 1/4w or 1/2w is fine. Add a piece of heat shrink to keep it clean.

Be sure to twist these orange wires.

For our layout we have replaced the PCB potentiometer and jacks with solder lug types.

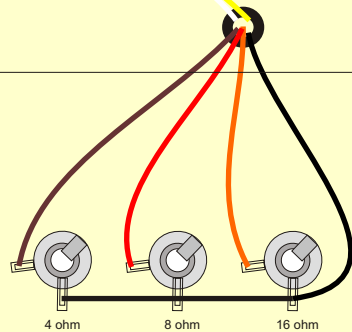

4 ohm 8 ohm 16 ohm