EPIPHONE VALVE JUNIOR

WITH WATTS TUBE AUDIO STOCK PARTS BOARD

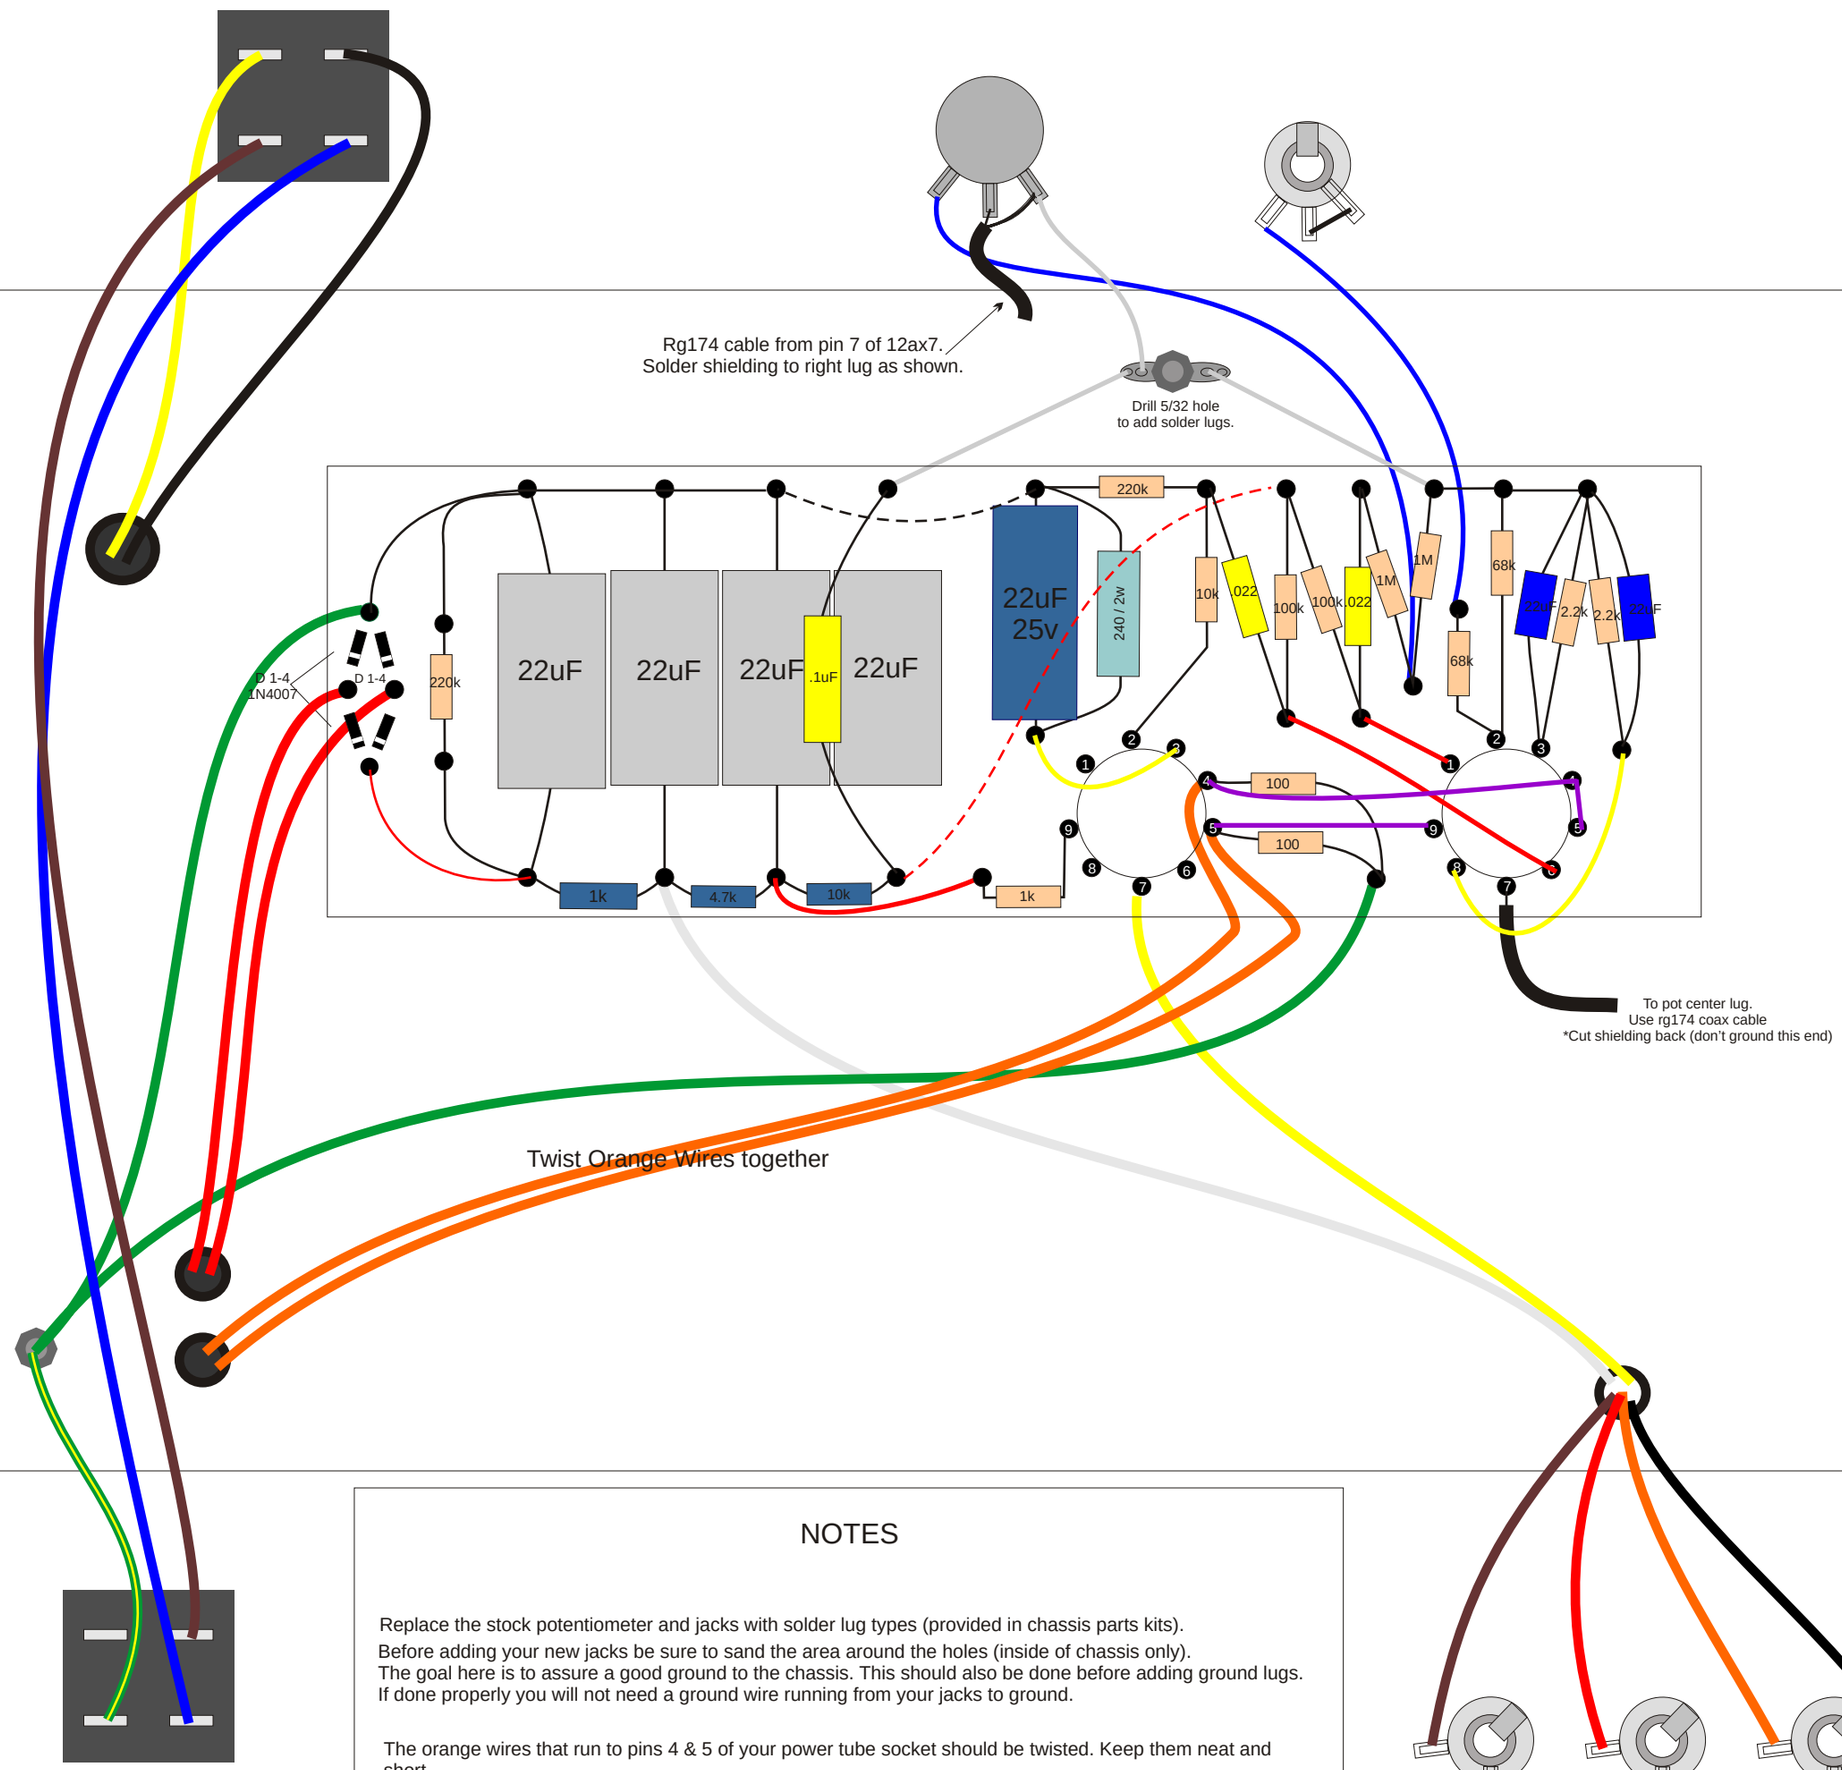

NOTES

Replace the stock potentiometer and jacks with solder lug types (provided in chassis parts kits).
Before adding your new jacks be sure to sand the area around the holes (inside of chassis only).
The goal here is to assure a good ground to the chassis. This should also be done before adding ground lugs.
If done properly you will not need a ground wire running from your jacks to ground.

The orange wires that run to pins 4 & 5 of your power tube socket should be twisted. Keep them neat and short.

Broken lines on board represent wire that runs under the board.